

SCAG

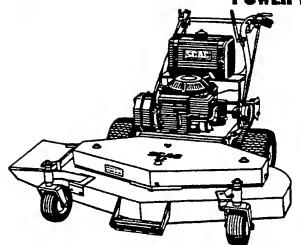

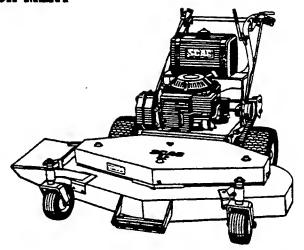

KEY IDENTIFYING FEATURES

ALL UNITS LISTED

3 GALLON METAL FUEL TANK 4 SPEED 700-013 TRANSMISSION NO OPERATOR PRESENCE CONTROL (OPTIONAL SEE SB 30)

MODEL#

SW32-12B

SW36-8J

SW36-12B

SW36-13K

SW48-12B

SW48-13K


SW-13K

SW-18KH

SWM-52

SWM-61

32" & 36" CUTTER DECKS

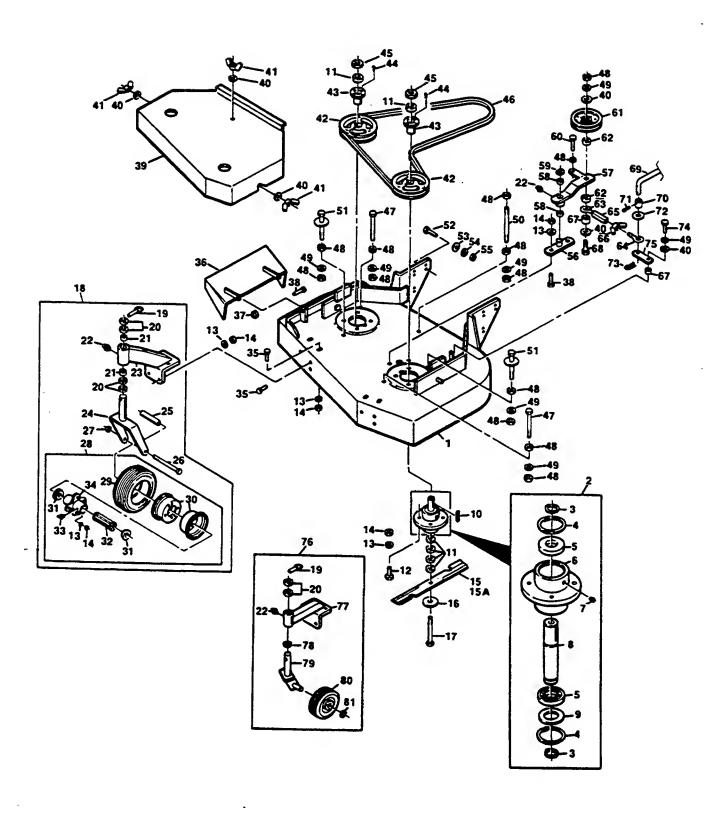


32" & 36" CUTTER DECK

| | . PART NO. | DESCRIPTION | | SW 36 | /M 36BS | REF. | PART NO. | DESCRIPTION | | SW 36 | M 36BS |
|-----|---------------|---|----|----------|------------|-------|-------------|------------------------------------|----|----------|-----------|
| | 46087 | Cutter Deck Wid (incl. Decal) | | x | x | 42 | 48127 | Pulley (incl. 43-44) | × | × | X |
| 1 | 45126 | Cutter Deck Wid | x | | | 43 | 48141 | Tapered Hub | x | X | x |
| 2 | 46020 | Cutter Spindle Assy (incl 3-9) | x | x | x | 44 | * | Hex Hd Bolt, 1/4-20 x 3/4 | × | x | x |
| 3 | 04050-04 | Retaining Ring, 1"ExtInverted | × | | X | 45 | * | Hex Nut, 5/8-11 | | X | |
| 4 | 04050-07 | Retaining Ring, 2-7/16 Int.bsc | X. | | X | 46 | 48204 | Belt, Blade Drive | •• | X | |
| 5 | 48101-01 | Bearing Cutter Spindle Upper | | x | X | 46 | 48278 | Belt, Blade Drive | x | | |
| 5a | 48101-02 | Bearing Cutter Spindle Lower | | x | | 47 | * | Hex Hd Bolt, 3/8-16 x 5 | | x | x |
| 6 | 41001 | Spindle Housing | x | X | X | 48 | • | Hex Nut, 3/8-16 | x | X | X |
| 7 | 48114-02 | Grease Fitting, Str 5/16 Serr | x | x | x | 48a | • | Hex Nut, 3/8-16 Ctr Locknut | | X | |
| 8 | 43001-02 | Spindle, Cutter Blade | x | x | x | 49 | • | Lockwasher, Spring 3/8 | | X | |
| 9 | 04041-02 | Washer, 1-5/16 x 2-13/32 x 16 ga. | | | | 50 | 04004-02 | | | X | |
| 10 | 04063-08 | Key, 1/4 x 1/4 x 2 | | x | | 51 | 45098 | Belt Guide Wid | | x | |
| 11 | 43038 | Spacer, Cutter Blade | | X | | 52 si | | Hex Hd Bolt, 7/16-14 x 1-1/4 | | X | |
| 12 | * | Hex Hd Bolt, 5/16-18 x 1-1/4 | | x | | 53 | * | Washer, 15/32 x 59/64 x 16 ga. | | x | |
| 13 | * | Lockwasher, Spring 5/16 | x | | x | 54 | • | Lockwasher, Spring, 7/16 | | x | |
| 14 | • | Hex Nut 5/16-18 | | x | | 55 | • | Hex Nut, 7/16-14 elastic stop | | x | |
| 14a | * | Hex Nut 5/16-24 | | x | | 56 | 45037 | Idler Pivot Wd | | x | |
| 15 | 48108 | Cutter Blade 18" | ^ | x | | | 4 46145 | Idler Arm Assy. (incl. 22 & 58) | | x | |
| 15 | 48110 | Cutter Blade 16 1/2" | x | ^ | ^ | 58 | 48100-05 | Bronze Bearing | | x | |
| | 48185 | Cutter Blade 18" Hi Lift | ^ | ¥ | x | 59 | 04050-02 | Retaining Ring, 3/4 Ext,-"E" | | x | |
| | 48184 | Cutter Blade 16 1/2" Hi Lift | x | ^ | ^ | 60 | 04004-04 | Stud | | x | |
| 16 | 04040-10 | Flat Washer, 5/8 W | x | J | | | 48269 | Idler Pulley, Belt Clutch | | × | |
| 17 | 04001-41 | Hex Hd Bolt, 5/8-11 x 9-1/2 | | x | ~ | 62 | 43063 | Spacer, idler | | x | |
| 18 | 46079 | Caster Assy. (incl.19-28) | Ĵ. | | ^ | 63 | 04070-02 | | | x | |
| 19 | 04066-01 | Quick Pin | | X | x | 64 | 04070-02 | Eyebolt, RH | | x | |
| 20 | 43037-01 | Spacer, Caster Yoke, 1/2 long | | | x | 65 | 43025 | Turnbuckle | | × | |
| 21 | 48100-01 | Bronze Bearing | ٠. | × | ^ | 66 | 04022-02 | | | X | |
| 22 | 48114-01 | Grease Fitting, Str. 1/4-28 | u | X | × | 67 | 43042 | | | X | |
| 23 | 46082 | | | | ^ | 68 | 43042 | Sieeve, Clutch Rod | | X | |
| 24 | 45006 | Support Assy. (incl. 21-22) Caster Yoke Wid | | X | | , | 44003 | Hex Hd Bolt, 3/8-16 x 2-3/4 | | | |
| | 43022 | - | | X | | 69 | 43043 | Blade Clutch Rod, Lower | | X | |
| 25 | | Sleeve, Caster Wheel Brg. | | X | | | 43043 * | Sleeve, Clutch Rod | | | |
| 26 | 04001-37 | Hex Hd Bolt, 1/2-13 x 5-1/2 | | × | | 71 | | Cotter Pin, 3/32 x 1 | | X | |
| 27 | | Hex Locknut, 1/2-13 | | X | | 72 | | Washer. 33/64 x 1 x 16 ga. | | X | |
| 28 | 48006-01 | Wheel Assy, (incl.13-14a, 29-34) | | X | | 73 | 04062-01 | Hair Pin, large | | X | |
| 29 | 48006-02 | Tire Only Caster Wheel | | X | | 74 | | Hex Hd Bolt, 3/8-16 x 1 | | X | |
| NS | 48006-03 | Inner Tube for 48006-01 | | X | | 75 | 42057 | Cam Link | | X | • • • |
| 30 | 48006-04 | Rim Pair, Caster Wheel | | X | | 76 | 46078 | Caster Assy (incl.19-20, 22, 77-81 | | | X |
| 31 | 48006-07 | Retainer, Bearing, Caster wheel | | X | | 77 | 45102 | Caster Support Wld. | X | | X |
| 32 | 48006-06 | Roller Bearing, Caster Wheel | | X | | 78 | 43037-02 | | × | | x |
| 33 | 48114-03 | Grease Fitting, 45' 1/4-28 | | X | | 79 | 45103 | Caster Yoke Wid. | X | | X |
| 34 | 48006-05 | Hub Assy, Caster Wheel | | X | | 80 | 48195 | Caster Wheel Assy. | X | | × |
| 35 | * | Hex Hd Bolt, 5/16-18 x 3/4 | | X | | 81 | 04050-01 | J, - | × | | × |
| 36 | 45100 | Discharge Chute Wld | | X | | 82 | 44009 | Belt Guide | X | X | |
| 37 | * | Hex Nut, 5/16-18 Elastic Stop | | X | | 83 | 42288 | Bumper Ballast | | | x |
| 38 | * | Hex Hd bolt, 5/16-18x1 | X | X | X | 83 | 42350 | Bumper Ballast | X | | |
| 39 | 46085 | Belt Cover Assy (incl. Decal) | | | x | 84 | • | Hex Hd Bolt, 5/16-18 x 1 1/2 | | X | |
| 39 | 46157 | Belt Cover Assy (incl. Decal) | X | | | 85 | * | Flat Washer, 5/16 | | X | |
| 40 | * | Washer, 25/64 x 15/16 x 12 ga. | X | X | x | 86 | 04041-089 | Washer, 3/4 x 1 1/4 x .035 | X | X | x |
| 41 | 04022-04 | Wing Nut, 3/8-16 elastic stop | X | X | x | 87 | 04040-09 | Washer | | | |

^{*} Common hardware should be purchased locally. All bolts are Grade 5 plated, all other fasteners are zinc plated.

| | SERVICE MANAGER'S NOTES |
|---------|--|
| REF. NO | <u>).</u> |
| 61 | See SB 25 - New Idler Arm Assembly |
| 57 | See SB 25 - New Idler Arm Assembly |
| 52 | Deck mounting bolts must be torqued to 70 ft. lbs. |
| | |
| | |

48", 52", & 61" CUTTER DECKS

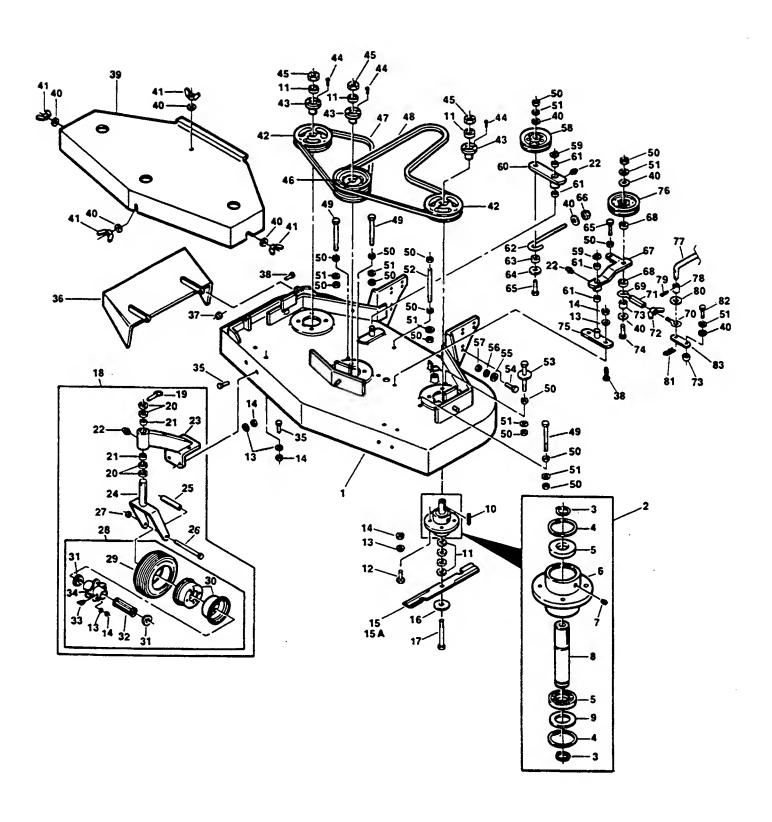


48", 52", & 61" CUTTER DECKS

| | . PART NO. | DESCRIPTION | | WN 52 | | REF. | PART NO. | DESCRIPTION | | WN 52 | |
|--------|----------------------|-----------------------------------|------------|----------|------------|----------|-------------|----------------------------------|----|----------|----------|
| 1 | 46088 | Cutter Deck (incl. decal) | | | | 42 | 48127 | Pulley (incl. 43-44) | x | × | × |
| 1 | 46163 | Cutter Deck (incl. decal) | ^ | x | | | 48141 | Tapered Hub | x | x | X |
| 1 | 46119 | Cutter Deck (incl. decal) | | ^ | x | 44 | * | Hex Hd Bolt 1/4-20 x 3/4 | x | × | x |
| 2 | 46020 | Cutter Spindle Assy. (incl. 3-9) | x | x | × | 45 | • | Hex Nut, 5/8-11 | x | x | X |
| | 04050-04 | Retaining Ring, 1° ExtInverted | | | | 4 | 48129 | Pulley, Double (incl. 43-44) | x | x | x |
| 3 4 | 04050-07 | Retaining Ring, 2-7/16" Int.basic | X | X | X X | | 48087 | Belt, RH Blade Drive | x | _ | ^ |
| | | Bearing, Cutter Spindle Upper | X | X | | | 48285 | Belt, RH Blade Drive | • | x | |
| 5 | 48101-01 48101-02 | Bearing, Cutter Spindle Lower | X | X | X X | | 48265 | Belt, RH Blade Drive | | •• | x |
| 5a | 41001 | Spindle Housing | X | X | X | | 48089 | Belt, Blade Drive | x | | _ |
| 6 | | Grease Fitting Str. 5/16 Serr. | X | X | X | | 48286 | Belt, Blade Drive | _ | x | |
| 7 | 48114-02 | Spindle, Cutter Blade | X | X | X | | 48264 | Belt, Blade Drive | | ^ | x |
| 8 | 43001-02 | | | | | 49 | * | Hex Hd Bolt, 3/8-16 x 5" | x | x | x |
| 9 | 04041-02 | Washer, 1-5/16 x 2-13/32 x 16 ga | | X | X | 50 | * | Hex Nut, 3/8-16 | x | x | x |
| 10 | 04063-08 | Key, 1/4 x 1/4 x 2 | X | X | X | 50a | • | Hex Nut 3/8-16, Centerlock | x | x | x |
| 11 | 43038 | Spacer, Cutter Blade | X | X | X | 51 | * | Lockwasher, Spring, 3/8 | x | x | × |
| 12 | * | Hex Hd Bolt, 5/16-18 x 1-1/4 | X | X | X | 52 | 04004-02 | Support, Belt Cover | x | x | x |
| 13 | | Lockwasher, Spring, 5/16 | X | X | X | 53 | 45098 | Belt Guide Wid. | x | x | x |
| 14 | * | Hex Nut, 5/16-18 | X | X | X | 54 8M | +3030 | Hex Hd Bolt, 7/16-14 x 1-1/4 | X | x | X |
| 14a | | Hex Nut, 5/16-24 | X | X | X | 54 8M | * | Washer, 15/32 x 59/64 x 16 ga. | X | × | X |
| 15 | 48110 | Cutter Blade 16-1/2" | × | | | 55 56 | • | Lock Washer, Spring, 7/16 | X | X | X |
| 15 | 48108 | Cutter Blade 18* | | X | | 57 | * | Hex Nut, 7/16-14 | | x | X |
| 15 | 48111 | Cutter Blade 21" | | | × | | | | X | | X |
| 15a | 48184 | Cutter Blade 16-1/2" Hi Lift | × | | | 58 59 | 48181 | Idler Pulley, "V" Groove | X | X | |
| 15a | 48185 | Cutter Blade 18° Hi Lift | | X | | | 04050-02 | Retaining Ring, 3/4" Ext."E" | X | X | X |
| 16 | 04040-10 | Flat Washer, 5/8"W | X | X | X | 60 | 46081 | Idler Arm Assy, (incl. 22 & 66) | × | X | X |
| 17 | 04001-41 | Hex Hd Bolt, 5/8-11 x 9-1/2" | × | X | × | 61 | 48100-05 | Bronze Bearing | X | X | X |
| 18 | 46079 | Caster Assy, Comp. (incl.19-28) | X | X | X | 62 | 43028 | Rod, Idler Pull, J | X | X | X |
| 19 | 04066-01 | Quick Pin | X | X | X | 63 | 43077 | Spacer, J Pull Rod | X | X | X |
| 20 | 43037-01 | Spacer, Caster Yoke, 1/2" long | X | X | X | 64 | 04041-12 | Washer, 3/8 x 1-1/2 x 16 ga. | X | X | X |
| 21 | 48100-01 | Bronze Bearing | X | X | X | 65 | | Hex Hd Bolt, 3/8-16 x 2-1/4 | X | X | X |
| 22 | 48114-01 | Grease Fitting, Str., 1/4-28 | X | X | X | 65a | 04004-04 | Stud | X | X | Х |
| 23 | 46082 | Support Assy. (incl. 21-22) | X | X | X | 66 | | Hex Nut, 3/8-16 Elastic Stop | X | X | Х |
| 24 | 45006 | Caster Yoke Wid. | X | X | X | | 46145 | Idler Arm (incl. 22 & 61) | X | X | X |
| 25 | 43022 | Sleeve, Caster Wheel Bearing | X | X | X | 68 | 43063 | Spacer | X | × | X |
| 26 | 04001-37 | Hex Hd Bolt, 1/2-13 x 5-1/2* | X | X | X | 69 | 04070-02 | Eyebolt, LH | X | X | X |
| 27 | * | Hex Locknut, 1/2-13 | X | X | X | 70 | 04070-01 | Eyebolt, RH | X | X | X |
| 28 | 48006-01 | Wheel Assy. (incl.13-14a, 29-34) | ' X | X | X | 71 | 43025 | Turnbuckle | X | X | . X |
| 29 | 48006-02 | Tire only, Caster Wheel | X | X | X | 72 | 04022-02 | Wing Nut, 5/16-18 | X. | X | × |
| | 48006-03 | inner Tube only, Caster Wheel | × | X | X | 73 | 43042 | Sieeve, Cam Clutch | X | X | × |
| 30 | 48006-04 | Rim Pair, Caster Wheel | X | x | X | 74 | * | Hex Hd Bolt, 3/8-16 x 2-3/4 | X | X | X |
| 31 | 48006-07 | Retainer, Bearing, Caster Wheel | x | X | X | 75 | 45037 | Idler Pivot Wid. | X | X | > |
| 32 | 48006-06 | Roller Bearing, Caster Wheel | X | x | x | 76 SM | 48269 | Idler Pulley, Belt Clutch | X | X | > |
| 33 | 48114-03 | Grease Fitting 45' 1/4-28 | x | x | x | 77 | 44003 | Blade Clutch Rod, Lower | X | X | > |
| 34 | 48006-05 | Hub Assy, Caster Wheel | X | x | x | 78 | 43043 | Sleeve, Clutch Rod | X | X | > |
| 35 | * | Hex Hd Bolt, 5/16-18 x 3/4" | x | x | x | 79 | • | Cotter Pin, 3/32 x 1 | X | X |) |
| 36 | 45029 | Discharge Chute Wid | x | | . x | 80 | * | Washer, 33/64 x 1 x 16 ga | X | x | , |
| 36 | 45100 | Discharge Chute Wid | | x | | 81 | 04062-01 | Hair Pin Large | x | × |) |
| 37 | * | Hex Nut, 5/16-18 Elastic Stop | x | × | × | 82 | * | Hex Hd Bolt, 3/8-16 x 1 | x | x | , |
| 38 | • | Hex Hd Bolt, 5/16-18 x 1 | × | x | x | 83 | 42057 | Cam Link | x | x | , |
| 39 | 46086 | Belt Cover Assy .(incl.Decais) | x | ^ | _ | 84 | 45046 | Roller Shaft Wld | | x | ; |
| | 46164 | Belt Cover Assy. (incl. Decais) | ^ | x | | 85 | 48038 | Guide Roller | | x | ; |
| 39 | 46121 | Belt Cover Assy. (incl. Decais) | | ^ | × | 86 | * | Flat Washer, 11/32 x 11/16 x 16g | a | x | , |
| 39 | 46121 | Washer 25/64 x 15/16 x 12 ga. | × | J | × | 87 | 44008 | Belt Guide | × | x | |
| 40 | 04022-04 | Wing Nut, 3/8-16 | X | X | × | 88 | * | Flat Washer, 5/16 | x | x | ; |

[†] Common hardware should be purchased locally. All bolt Grade 5, all other fasteners zinc plated.

| 000 | | |
|-----------------|--|--|
| <u>REF. NO.</u> | | |
| 76 | See SB 25 - New Idler Arm Assembly. | |
| 67 | See SB 25 - New Idler Arm Assembly. | |
| 54 | Deck mounting bolts must be torqued to 70 ft. lbs. | |

ENGINE DECK

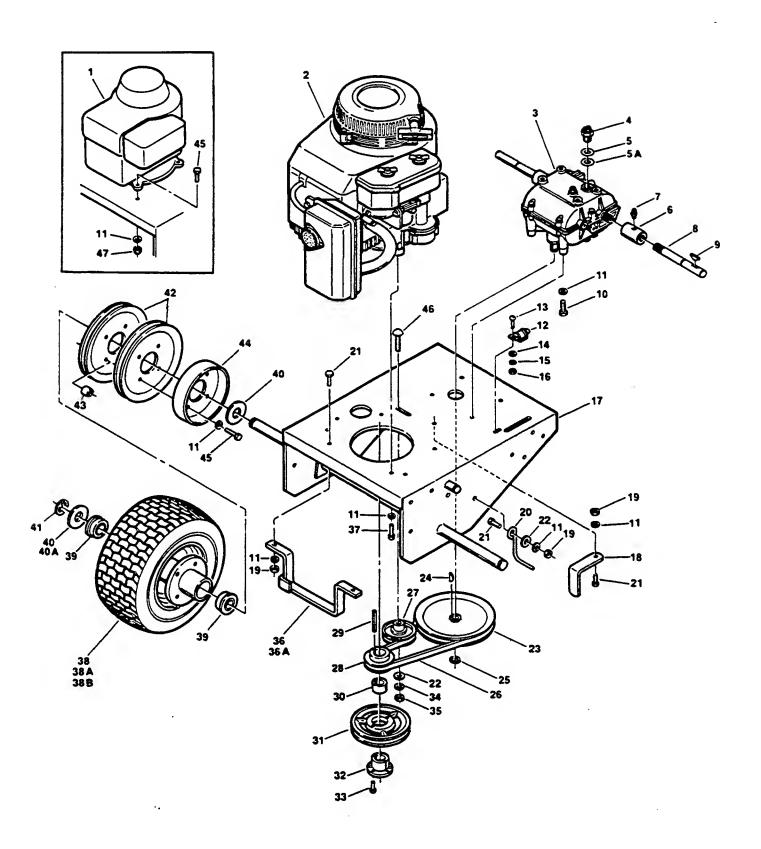

ENGINE DECK

| | . PART NO. | DESCRIPTION | SW 32 12B | SW 36 12B | SW 36 13K | SW 36 8J | SW 48 12B | 48 | 52 | SW 52 18KH | SW 61 18KH |
|-------|---------------|---|-----------------|-----------------|-----------------|----------------|-----------------|----|----|------------------|------------------|
| | 48268 | | | | | | | | | | |
| SM | 48273 | Engine 18HP Kohler (MV18 PS-58511) Engine 8HP JLO | | | | x | | | | X | X |
| | 48271 | Engine 12HP Briggs (281702 type 0152-01) | u | U | | ^ | x | | | | |
| | - | | X | X | | | ^ | J | u | | |
| | 48190 | Engine 12.5 Kawasaki (FB460-ES05) | | | X | | | X | X | | |
| | 48191 | Transmission (PEERLESS 700-013) | X | X | X | X | X | X | X | X | X |
| | 48021 | Neutral safety switch | × | X | X | X | X | X | X | X | X |
| 5 | 48122-01 | Fibre washer, thin | x | X | X | X | X | X | X | × | x |
| ia | 48122-02 | Fibre washer, thick | × | × | x | X | × | X | X | x | x |
| 3 | 48226 | Coupler, jackshaft | × | x | x | X | × | X | X | × | x |
| • | 48114-01 | Grease fitting, str. 1/4-28 | × | x | × | X | x | X | × | X | X |
| 3 | 48225 | Jackshaft | x | × | x | X | x | X | | | |
| 3a | 48242 | Jackshaft | | | | | | | × | x | X |
| 3 | 04063-09 | Key, Hi-Pro #9 | x | X | X | x | × | × | x | × | X |
| 0 | * | Hex Hd Bolt, 5/16-18 x 3/4 | × | x | × | X | × | × | × | × | X |
| 11 | * | Lockwasher, Spring 5/16 | x | × | × | X | × | X | X | x | X |
| 2 | 48211 | Clutch Safety Switch (White Housing) | × | X | × | × | x | X | X | x | × |
| 13 | * | Mach.Scr, Phil, 10-32 x 1/2 | x | x | × | x | x | X | x | x | X |
| 14 | * | Washer .219 x.500 x.049 | × | × | × | x | × | X | X | x | x |
| 15 | * | Lockwasher, #10 Ext. Tooth | × | X | × | × | × | x | X | x | x |
| 16 | • | Hex Nut #10-32 | × | x | × | x | × | x | x | x | x |
| | u45090 | Engine Deck Wid. | | x | × | x | × | X | | | |
| 17 s# | u45116 | Engine Deck Wid. | | | | | | | × | x | x |
| | 45128 | Engine Deck Wld. | × | | | | | | | | |
| 18 | 42263 | Rear Belt Guide, Engine | x | × | × | X | x | x | × | x | × |
| 19 | * | Hex Nut, 5/16-18 | × | X | x | X | × | × | X | × | x |
| 20 | 44006 | Belt Guide, Traction Dr. | x | X | × | × | x | X | X | X | X |
| 21 | * | Hex Head Bolt, 5/16-18 x 1 | × | x | x | x | x | X | X | × | X |
| 21a | 04003-04 | Carriage Hd Bolt 5/16-18 x 1 | x | x | x | × | × | X | X | × | X |
| 22 | * | Washer, 25/64 x 15/16 x 12 ga. | x | x | x | x | x | x | x | x | × |
| | 40407 | | x | x | x | x | x | x | x | x | x |
| 23 | 48197 | Pulley, Trans. Input | | | × | | x | x | × | â | x |
| 24 | 04063-07 | Key, Woodruff #9 | X | X | | X | | | | | x |
| 25 | 04050-09 | Retaining Ring, 5/8 Ext.Basic | X | X | X | X | X | X | X | X | |
| 26 | 48203 | Belt, Transmission Drive | × | X | X | X | X | X | X | X | X |
| 27 | 48201 | Idler Pulley, Transmission | × | X | X | × | X | X | X | X | X |
| 28 | 48196 | Pulley, Traction Drive | × | X | × | | X | X | × | × | × |
| 28 | 48249 | Pulley, Traction Drive | | | | X | | | | | |
| 29 | 04063-03 | Key, 1/4 x 1/4 x 2-1/2 | × | × | × | | × | X | X | × | x |
| 29 | 04063-10 | Key, 3/16 x 13/16 x 2-1/2 | | | | X | | | | | |
| 31 | 48127 | Pulley, Belt Dr. (Incl. 32-33) | x | × | × | | x | X | x | X | X |
| 31 | 48247 | Pulley, Belt Dr. (Incl. 32-33) | | | | x | | | | | |
| 32 | 48141 | Taper Hub (for 48127) | × | X | x | | × | X | X | × | × |
| 32 | 48248 | Taper Hub (for 48247) | | | | x | | | | | |
| 33 | * | Hex Hd Bolt, 1/4-20 x 3/4 | × | X | × | x | × | X | X | x | × |
| 34 | * | Lockwasher, Spring, 3/8 | × | × | x | x | × | x | x | × | x |
| 35 | * | Hex Nut, 3/8-16 | × | X | X | X | × | X | x | x | x |
| 36 | 42268 | Belt Guide, Saddle | × | X | x | X | | | | | |
| 36A | 42265 | Belt Guide, Saddle | | | | ••• | x | x | x | x | x |
| 37 | 42205 * | Hex Hd Bolt, Metric 8x25 | x | × | × | | x | x | x | x | x |
| | * | Hex Hd Bolt, Metric 10x30 | ^ | _ | - | x | - | - | - | - | |
| 37 | | Drive Wheel Assy (Incl. 38A-38B) | | x | x | x | x | x | × | x | × |
| 38 | 48192-01 | | U | ^ | ^ | ^ | ^ | ^ | ^ | ^ | - |
| 38 | 48253 | Drive Wheel Assy (Incl. 38C-38D) | X | | _ | _ | J | u | U | U | J |
| 38A | 48192-02 | Tire, 13 x 6.50-6, 2-Ply | | X | X | X | X | X | X | X | X |
| 38B | 48192-03 | Rim & Bearing Assy (Incl. 39) | | X | X | X | × | × | × | X | ^ |
| 38C | | Tire, 13 x 5.00-6, 2Ply | X | | | | | | | | |
| 38D | | Rim & Bearing Assy (incl. 39) | x | | | | | | | | |
| 39 s | M48193 | Wheel Bearing | x | × | x | X | × | X | X | X | X |
| 40 | 04042-05 | Washer, 1-1/16 x 1-3/4 x 12 ga. | x | × | × | X | × | X | X | X | x |
| 40A | | Washer, 1-1/16 x 1-1/2 x 18 ga. | × | × | x | X | × | X | X | × | × |
| 41 | 04050-08 | Retaining Ring, 1" Ext"E" | x | X | × | x | x | x | X | x | x |
| 42 | 48200 | Pulley, Wheel Drive | × | x | × | x | × | x | × | × | × |
| 74 | 43088 | Spacer, Wheel Pulley | x | × | × | x | x | x | × | × | x |

^{*} Common hardware should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated

ENGINE DECK CONT'D See Page C5 For Illustration

| | F. PART NO. | DESCRIPTION | | 32 | | 36 | 36 | SW 48 12B | SW 48 13K | SW 52 13K | SW 52 18KH | SW 61 18KH |
|------------|----------------|---|-----|-------|-------|-------|------------|-----------------|-----------------|-----------------|------------------|------------------|
| 44 | 48209 | Brake Drum | | × | × | x | x | × | x | × | x | × |
| 45 | * | Hex Head Bolt, 5/16-18 x 1-1/2 | | X | × | X | X | × | x | x | x | × |
| 46 | 04003-03 | Sh.Sq.Nk.Car. Bolt, 3/8-16 x 2 | | X | × | | X | × | x | x | x | x |
| 47 | * | Hex Nut, 5/16-18 Elastic Stop | | × | × | x | X | x | x | x | x | × |
| 48 | * | Carr Bolt, 3/8-16 x 1 1/2Rd.Hd. Sh. Sq. NK. | • | • | | • •:. | | 1100 | | | X | × |
| 50 | 42330 | Bracket, Idler Pulley | | • | • | ; | ٠., | | 6 · · · · · · | | X. | x |
| 51 | 43063 | Spacer | | | | • | | >• | | | × | |
| 52 | 04041-11 | Washer, 13/32 x 1-1/2 x 7 ga. | . : | | de la | | | | A 1 | | × | × |
| 57 | 42333 | Engine Mounting Plate | | • | | | × | 14. | | | | |
| 58 | • | 5/16-18 x 1 Hex Hd. Bolt | | | | | X | | | | • | |
| 59 | • | 6-1x45 Full thrd Hex Hd. Bolt | | | | | × | | | | | |
| 5 0 | • | 1/4 Lockwasher, Spring | | | | | X | | | | | |
| 61 | * | Hex Nut, 6-1 | | | | | X | | | | | |
| 52 | 48275 | Clamp, Fuel Hose | | | | | X · | | | | | |
| 53 | • | Hex Hd Bolt 3/8-16 x 2 | | ; | | | : . ; | | | | x | x |
| 64 | 48030 | Clamp Fuel Hose | | | | | | | | | \x | X |
| 65 | 48257 | Pipe Cap | | 1. 1. | | · | | V. | | ; | x | χ. |
| 66 | 48254 | Pipe 4" nipple | | | | ٠., . | | | | | X | X |
| 67 | • | Lockwasher, 7/16 Spring | | | | | x . | | | | | |


^{*} Common hardware should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

SERVICE MANAGER'S NOTES

| REF. NO. | |
|----------|---|
| 39 | See SB 32 - Drive wheel bearings (outside diameter). |
| 17 | See SB 44 - Engine deck support plate. |
| 3 | See SB 38 - 4 to 5 speed conversion. |
| 1 | See SB 42 - Solutions to starter ratcheting (only Kohler) |


SERVICE MANAGER'S NOTES FOR PAGE 9

See SB 27 - Reduction of forward speed. See SB 31 - Transaxle conversion kit.

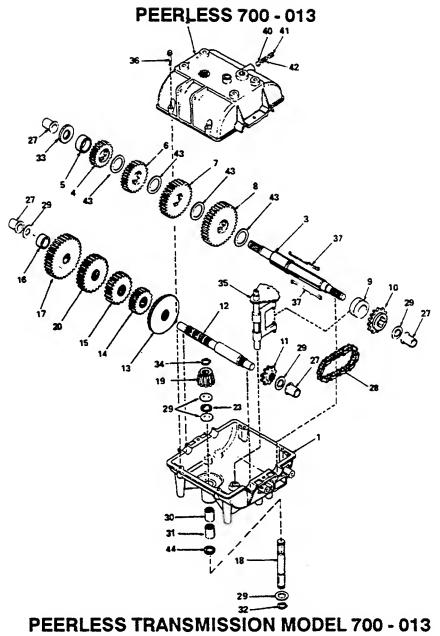

| REF. NO. | PART NO. | DESCRIPTION | ALL UNITS | REF. | PART NO. | DESCRIPTION | ALL UNITS |
|-------------|-------------|------------------------------------|-----------|------|-------------|--|-----------|
| 1. | 770061 | Case, Transmisson | × | 20 | 778126A | Gear, Spur (20 teeth) | × |
| 2. | 772083 | Cover, Transmission | x | 23 | 780071 | Bearing, Thrust | × |
| 3 | 776217 | Shaft, Output & Brake | x | 27 | 780105A | Bushing, Flanged | × |
| 4 | 778123A | Gear, Spur (25 teeth) | × | 28 | 786081 | Chain, Roller (No.41 chain,24 links) | x |
| 5 | 786072 | Spacer, 1-3/8"OD x 1-1/8"ID x 3/8" | x | 29 | 780072 | Washer, Thrust | x |
| 6 | 778124A | Gear, Spur (30 teeth) | x | 30 | 780086 | Bearing, Needle | x |
| 7 | 778125 | Gear, Spur (35 teeth) | x | 31 | 780142 | Bearing, Needle | x |
| 8 | 778146A | Gear, Spur (37 teeth) | x | 32 | 792035 | Ring, Retaining | × |
| 9 | 784266 | Collar, Shift | X | 33 | 780139 | Washer, Thrust | × |
| 10 | 786083 | Sprocket (18 teeth) | × | 34 | 788040 | Ring, Retaining | × |
| 11 | 786082 | Sprocket (9 teeth) | x | 35 | 784267 | Rod & Fork Assy., Shift | × |
| 12 | 776134 | Shaft, Counter | x | 36 | 792073 | Screw, Flanged Hex hd.tf, 1/4-20x1-1/4 | 4 x |
| 13 | 778154 | Gear, Bevel (42 teeth) | × | 37 | 792089A | Key | x |
| 14 | 778145 | Gear, Spur (12 teeth) | X. | 40 | 792077 | Ball, Steel, 5/16" | x |
| 15 | 778151 | Gear, Spur (15 teeth) | x | 41 | 792078 | Screw, Set 3/8-16 x 3/8 | × |
| 16 | 786071 | Spacer, 1-1/8"OD x 3/4"ID x 3/8" | x | 42 | 792079 | Spring | x' |
| 17 | 778127A | Gear, Spur (25 teeth) | X | 43 | 780108 | Washer, Thrust | × |
| 18 | 776135 | Shaft, Input | × | 44 | 792001 | "O" Ring | x |
| 19 | 778176 | Bevel Pinion, Input | x | 1 | | | ~ |

HANDLE ASSEMBLY

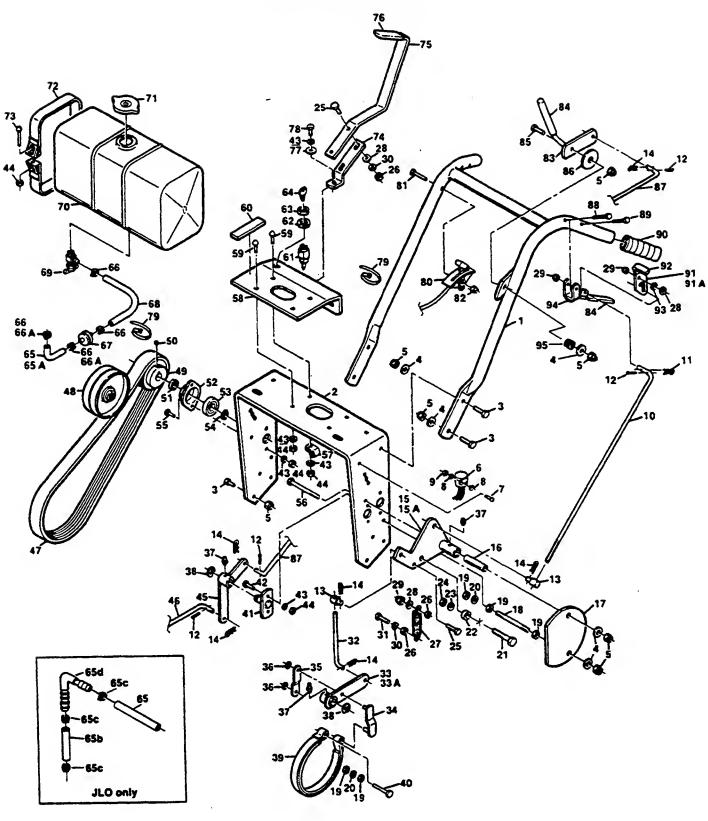

HANDLE ASSEMBLY

| REF. NO. | PART | | 32 | 36 | SW 36 13K | 36 | SW 48 | SW 48 13K | SW 52 13K | SW 52 18KH | SW 61 18KH |
|------------------|----------------------|---|------------|--------|-----------------|-------------|----------|-----------------|-----------------|------------------|------------------|
| NO. | NO. | DESCRIPTION | 120 | 120 | 131 | | 120 | 131 | 131 | 101(1) | TOINT |
| 1 | 46178 46179 | Handle Assy. (incl. 90 & decals) Handle Assy. (incl. 90 & decals) | x | x | × | x | × | x | x | × | x |
| 1 2 | 40179 42249 | | x | x | x | x | x | × | ^ | ^ | ^ |
| 2 | 42310 | Handle Mounting Frame | •• | - | - | | | | X | X | x |
| 2 3 | * | Hex Hd Bolt, 3/8-16 x 1 | X | X | X | X | X | X | X | X | X |
| 4 | * | | X | X | X | X | X X | X X | X X | X X | X X |
| 5 6 | 48213 | | X X | X X | X X | X | X | â | â | â | x |
| 7 | * | Mach. Screw, Phillips, #10-32 x 1/2 | x | x | x . | x | x | X | X | X | X |
| 8 | * | Lockwasher, #10 Ext. Tooth | X | X | x | X | × | x | X | X | X |
| 9_ | * | Hex Nut, #10-32 | X | X | X | X | X | X | X | X | X |
| 10 | 44004 | Control Rod, Steering | X | X X | X X | X X | X X | X X | X X | X X | X X |
| 11 12 | 04062-02 | Hair Pin, Small Cotter Pin, 3/32 x 3/4 | X X | X | x | x | â | x | x | â | x |
| 13 | 43032 | Swivel Joint | x | x | x | x | x | X | X | X | X |
| 14 | 04062-01 | Hair Pin, Large | X | X | x | X | × | X | X | X | × |
| 15 | 45091-01 | idler Bracket Wid, RH | X | X | X | X | Х. | X | X | X | X |
| 15A | 45091-02 | Idler Bracket Wid, LH Idler Sleeve | X X | X X | X X | X X | X X | X X | X X | X X | X X |
| 16 17 | 43092 42283 | Belt Guard | X | X | X | â | x | â | x | â | x |
| 18 | 04004-01 | Support Belt Guard | x | x | x | x | x | x | x | x | X |
| 19 | • | Hex Nut, 3/8-16 | X | X | X | × | X | X | X | X | X |
| 20 | * | Lockwasher, Spring, 3/8 | X | X | X | X | X | X X | X X | X X | X X |
| 21 22 | | Hex Head Bolt, 3/8-16 x 2-3/4 Flat Washer 1/4 | X X | X X | X X | X | X X. | × | x | x | x |
| 23 | * | Lockwasher, Spring, 1/2 | x | â | â | x | ŵ, | x | â | x | x |
| 24 | * | Hex Nut, 1/2-13 Elastic Stop | X . | X | × | X | × | X | X | x . | X |
| 25 25A | * | Hex Head Bolt, 5/16-18 x 1-1/4 | X | X | × | X | × | X | X | X | X |
| 25A | 04003-06 | Carriage 1/4-20 x 1 | X | X | X | X | X | X | X X | X | X X |
| 26 27 | 48051 | Hex Nut, 5/16-18 Spring, Idler Tension | X X | X X | X X | X | X X | X X | x | X X | x |
| 28 | 40051 | Washer, 11/32 x 11/16 x 16 ga. | x | x | â | x | â | x . | x | x | x |
| 29 | * | Hex Nut, 5/16-18 Elastic Stop | X | X | X | X | X. | X | X | X | × |
| 30 | * | Lockwasher, Spring, 5/16 | X | X | × | X | × | × | X | X | x |
| 31 | * | Hex Head Bolt, 5/16-18 x 1 | X | X | X | X | X | X | X X | × | X X |
| 32 33 s | 44005 m 45092-01 | Brake Road Brake Lever Wid, RH | X X | X | X X | X | X | X | x | × | x |
| | M 45092-01 | Brake Lever Wid, LH | x . | x | x | x | x | x | x | x | x |
| 34 | 45093 | Brake Link Wid. | X | X | × | X | × | X | X | X | x |
| 35 | 42254 | Brake Link | X | X | × | X | X | X | X | X | X |
| 36 | 04024-01 | Nut, Push-On, 3/8 | X X | X | X | X | X | X X | X X | X X | X X |
| 37 38 | 48114-01 04050-01 | Grease Fitting, Str., 1/4-28 Reaining Ring, 5/8 Ext"E" | x | x | x | x | â | â | x | â | x |
| 39 | 48210 | Brake Band | â | â | â | x | x | X | x | X | X |
| 40 | * | Hex Head Bolt, 3/8-16 x 2 | X | X | × | X | × | X | X | × | X |
| 41 | 45094 | Bell Crank Pivot Wid. | X | X | × | X | X | X | X | X | X |
| 42 | * | Hex Head Bolt, 1/4-20 x 1 | X | X X | X | X | X | X X | X X | X X | X X |
| 43 44 | | Lockwasher, Spring, 1/4 Hex Nut, 1/4-20 | x | x | x | x | â | â | x | x | x |
| 45 | 45095 | Bell Crank Wid, Clutch | x | x | x | x | × | X | X | X | X |
| 46 | 44003 | Blade Clutch Rod, Lower | X | × | X | x | X | × | x | X | X |
| 47 8 | SM 48202 | Belt, Wheel Drive | X | X | X | X | X | X | X | X | X |
| 48 | 48198 | Idler Pulley, Wheel Drive | X | X | X | X | X. | X X | X X | X X | X X |
| 49 50 | 48199 | Pulley, Jackshaft (Incl. 50) Setscrew, Hex Socket Knurled Cup Pt.5/16-16 Nylock | X | × | x | x | x | â | x | â | â |
| 51 | 43098 | Spacer, Jackshaft Pulley | x | x | x | x | x | x | x | x | x |
| 52 | 48223 | Flange, Jackshaft Bearing | X | X | X | X | X | × | x | × | x |
| 53 54 | 48224 | Bearing, Jackshaft | X | X | X | X | X | X | X | X | X |
| 54 | 04050-09 | Retaining Ring, 5/8 ExtBasic | X | X | X | X | X | X X | X X | X X | X X |
| 55 56 | * | Hex Head Bolt, 1/4-20 x 3/4 Hex Head Bolt, 3/8-16 x 4 | x | x | â | x | x | â | x | x | x |
| 55 56 57 | 48030 | Clamp | x | x | x | x | x | x | x | x | x |
| 58 9 | SM 42251 | Shifter Plate | x | X | X | × | X | × | x | × | x |
| 58 s 59 60 | * | Carriage Bolt, 1/4-20 x 1 | X | X | X | X | X | X | X | X | X |
| 60 | 48205 | Rubber Pad (lower) | X | X | X | X | X | X | X X | X X | X X |
| 61 | 48171 | Key Switch Lockwasher, Internal Tooth, 5/8 | X | X | X | X | X | x | x | â | â |
| 62 63 | 48017-03 48017-04 | Hex Nut, 5/8-32 | x | ŵ | x | x | × | x | X | X | × |
| 64 | 48017-02 | Key, Ignition | X. | X | X | X | X | X | X | X | X |
| 65 | 48058-01 | Fuel Hose, Short Briggs 1/4 ID x 3-1/2" | X | X | X | | × | | | _ | |
| 65 65 | 48058-02 | Fuel Hose Kohler 1/4 ID x 14 1/8" | | | | × | | | | × | × |
| 65 65a | 48058-08 48179-01 | Fuel Hose 8J 1/4 ID x 4 1/2" Fuel Hose, Short Kawasaki 7/32 ID x 3-1/2" | | | × | ^ | | х. | × | | |
| 02 a | 48058-09 | Fuel Hose 8J 1/4 ID x 1-1/4" | | | | x | | | | | |

^{*} Common hardware should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated

HANDLE ASSEMBLY CONT'D See Page © For Illustration

| | | | sw | SW | SW | SW | SW | SW | SW | SW | SW |
|-------|----------|---|------------|-----|-----|-----------|-----|-----|------------|------|--------|
| REF. | PART | | 32 | 36 | 36 | 36 | 48 | 48 | 52 | 52 | 61 |
| NO. | NO. | DESCRIPTION | 12B | 12B | 13K | 8J | 12B | 13K | 13K | 18Ki | 1 18KH |
| 65c | 48275 | Clamp, fuel hose 8J | | | | x | | | | | |
| 65d | 48282 | Elbow, 8J | | | | × | | | | | |
| 66 | 48059-01 | | × | x | | × | × | | | × | × |
| 66A | 48059-02 | Clamp, Fuel Hose Kawasaki | | | × | | | × | × | | |
| 67 | 48057-02 | Fuel Filter | × | x | × | X | x | x | x | × | × |
| 68 | 48058-06 | Fuel Hose, Long 1/4 ID x 17" | × | x | × | x | x | x | . X | × | × |
| 69 | 48056 | Valve, Fuel Shut Off | X | X | x | X | ^ X | × | × | × | × |
| 70 | 46091 | Fuel Tank Assy. (Incl. Decals 23,71,69) | X | × | × | × | × | × | × | × | × |
| 71 | 48055 | Fuel Tank Cap | x | x | x | × | X | × | × | x | x |
| 72 | 42262 | Strap, Fuel Tank | x | x | x | X | X | × | × | x | x |
| 73 | • | Mach. Rd. Hd. Slotted, 1/4-20 x 2 | × | x | × | x | X | × | × | × | × |
| 74 8 | | Shifter Lever | × | × | x | X | × | · X | × | × | × |
| 75 8 | | Shift Lever Assy. (Incl. 76) | × | × | × | x | x | x | x | × | × |
| 76 | 48215 | Grip, Shift Lever | × | X | x | x | x | x | . X | × | × |
| 77 | 04043-01 | | × | X | x | X | x | × | x | X. | × |
| 78 si | | Hex Head Bolt, 1/4-28 x 3/4 Grade 8 | x | X | X | X | x | × | × | x | × |
| 79 | 48028-01 | Cable Tie | x | x | x | X | x | x | x | x | × |
| 80 | 48206 | Throttle Control | X | x | × | | x | × | × | | |
| 80 | 48274 | Throttle Control | | | | × | | | | | |
| 80 | 48266 | Throttle Control | | | | | | | | x | x |
| 81 | • | Hex Head Bolt, 1/4-20 x 2 | x | x | x | X | x | x | x | x | x |
| 82 | • | Hex Nut, 1/4-20 Elastic Stop | × | × | × | X | × | × | × | × | × |
| 83 | 46090 | Blade Clutch Lever Assy. (Incl. 84) | x | x | x | X | x | × | x | x | x |
| 84 | 48144 | Grip, Lever | × | x | × | × | x | · x | x | × | × |
| 85 | • | Hex Head Bolt, 3/8-16 x 1-3/4 | × | × | × | × | x | × | , x | × | × |
| 86 | 04041-10 | | × | x | x | × | × | × | x | × | x |
| 87 | 44002 | Belt Clutch Rod, Upper | , x | × | x | × | X | × | × | × | × |
| 88 | • | Hex Head Bolt, 5/16-18 x 2-1/4 | × | × | x | × | X | × | × | x | × |
| 89 | • | Hex Head Bolt, 5/16-18 x 2 | × | x | × | × | x | × | x | x | x |
| 90 | 48159 | Grip, Handle | × | x | × | × | × | × | x | × | × |
| 91 | 46083-01 | Neutral Latch Assy, RH (Incl. 92) | x | × | × | x | × | × | × | × | × |
| 91A | 46083-02 | Neutral Latch Assy, LH (Incl, 92) | x | x | x | × | × | × | x | x | × |
| 92 | 48095 | Grip, Neutral Latch | x | × | x | x | × | x | x | × | x |
| 93 | 04032-01 | Curved Spring Washer | × | × | × | × | ' X | x | x | × | × |
| 94 | 46089 | Brake Lever Assy. (Incl. 84) | × | x | × | × | X | × | · x | x | x |
| 95 | 48050 | Spring Compression | x | × | × | × | × | x | 'X | × | × |
| 96 | 48091 | Choke Control | | | | | | | | × | × |

^{*} Common hardware should be purchased locally. All bolts Grade 5 plated, All other fasteners zinc plated.

SERVICE MANAGER'S NOTES REF. NO. See SB 23 - Non-hardened washers on transmission shifter shaft. 78 75 See SB 38 - 4 to 5 speed conversion kit. 74 See SB 38 - 4 to 5 speed conversion kit. 58 See SB 38 - 4 to 5 speed conversion kit. See SB 52 - Belt slippage on walkers. 47 33 See SB 37 - Wheel drive belt slipping.

REPLACEMENT DECALS

SCAG

48314
Decal - Scag's Logo
(Located On Cutter Deck Cover - Top Surface)

R N 1 2 3

48216 - 4SPD 48332 - 5SPD Decal - Shift Index (Located On Shifter Plate - Above Shift Lever)

NEUTRAL

DCK



48218
Decai - Nuetral Lock
(Located on RH & LH Handle Tube
Near Lock Lever)

HEAVY DUTY COMMERCIAL

48072
Decal - Heavy Duty Commercial
(Located On Cutter Deck Cover - Front Wall)

DANGER

ROTATING BLADES AND BELTS

- . KEEP HANDS, FEET & CLOTHING CLEAR
- . KEEP ALL GUARDS IN PLACE
- SHUT OFF ENGINE & DISENGAGE BLADE CLUTCH BEFORE SERVICING
- . CLEAR AREA OF DEBRIS BEFORE MOWING
- CLEAR AREA OF DEBRIS BEFORE MOWING
 USE CAUTION IN DIRECTING DISCHARGE
- KEEP BYSTANDERS, CHILDREN & PETS AWAY
- READ INSTRUCTION MANUAL BEFORE OPERATING

48073

Decal - Danger, Rotating Blades (Located On Cutter Deck Cover -Near Discharge Chute) 48

| 72 | 48327 |
|----|-------|
| 61 | 48320 |
| 52 | 48319 |
| 48 | 48318 |
| 36 | 48316 |
| 32 | 48315 |



48071 Decat - O.P.E.I. Safety (Located On Cutter Deck Near Discharge Chute)

CLOSE FUEL VALVE WHEN MACHINE IS NOT IN USE

IF WALVE IS LIFT OPEN SEVERE ENGINE BANKAGE OR HAND STAITING MAY MESULT FROM FLOROMS

48214

Decal - Fuel Shutoff (Located On Fuel Tank - Above Keyswitch)

A DANGER

SERIOUS BODILY INJURY MAY RESULT FROM FAILURE TO FOLLOW SAFE OPERATING PROCEDURES.

BEFORE LEAVING OPERATOR'S POSITION, YOU MUST

- DISENGAGE CUTTER BLADES
 SHIFT TRANSMISSION TO
- NEUTRAL

 WAIT FOR ALL MOVEMENT
 TO STOP

READ OPERATOR'S MAINUAL FOR ADDITIONAL SAFETY GUIDES.

48222

Decal - Operator Warning (Located On Fuel Tank -Above Shift Lever)



48079
Decal - Key Switch
(Located On Shifter
Plate - Near Keyswitch)

WIRING SCHEMATIC

